


Coach


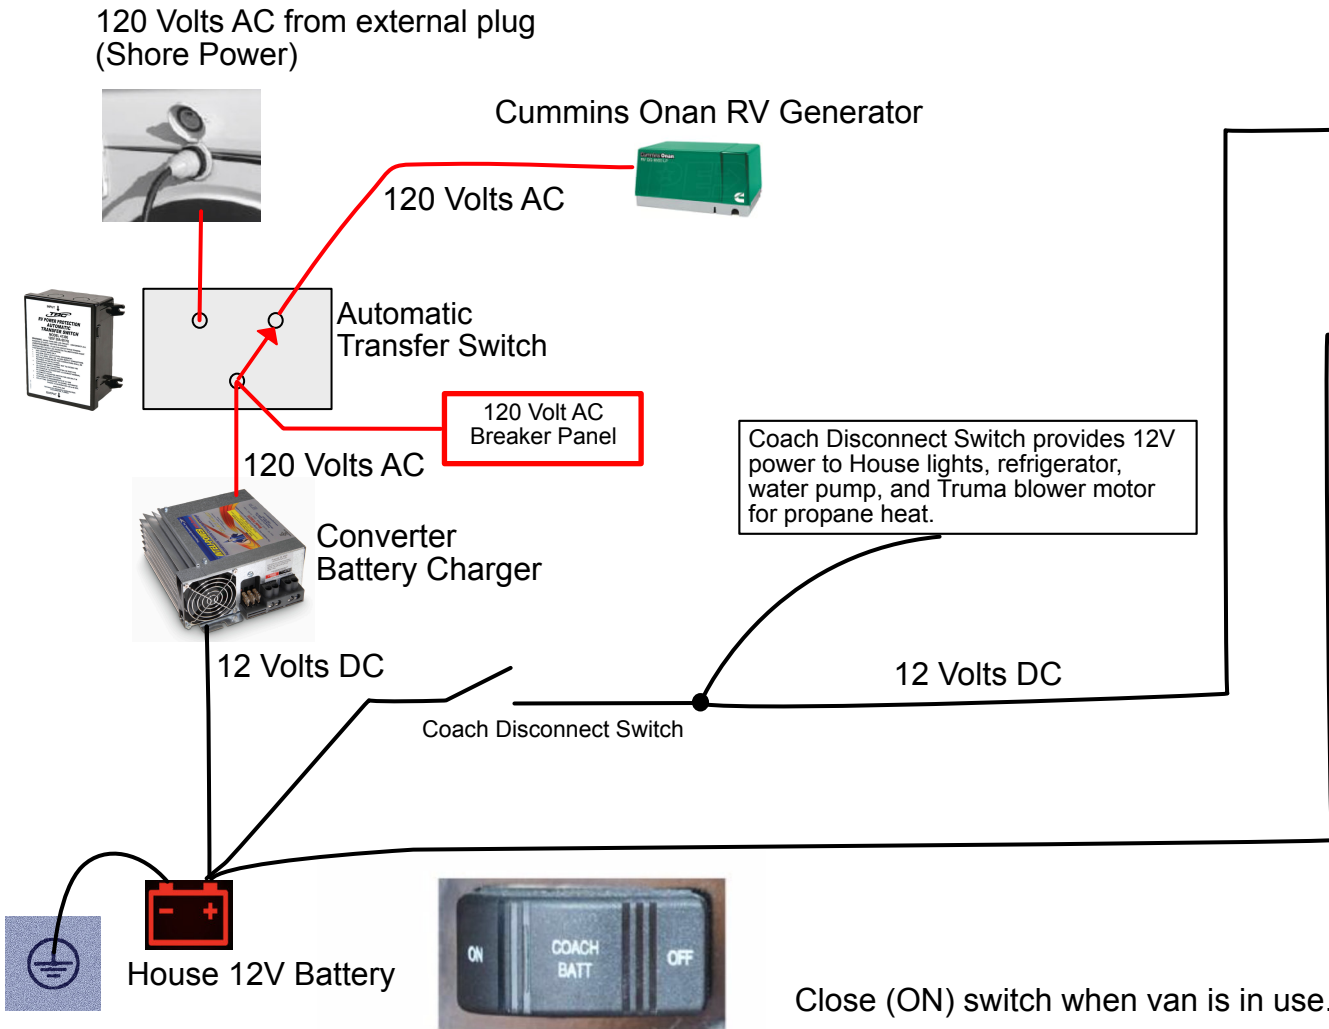


Close (ON) switch when van is in use.

Open (Off) switch when van is stored to prevent accidental discharge of Battery.

- House/Coach Battery Disconnect Switch
- Model 70A - Located on front side of galley.
 - Model 70C - Located on lower front of galley.
 - Model 70X - Located near monitor panel.
- Coach batteries operate the Coach 12-volt system independent of the Chassis battery. When the engine is running the alternator will provide 12V DC power to Coach appliances. If the Coach Disconnect switch is closed the alternator will also charge the coach battery.

Engine Chassis

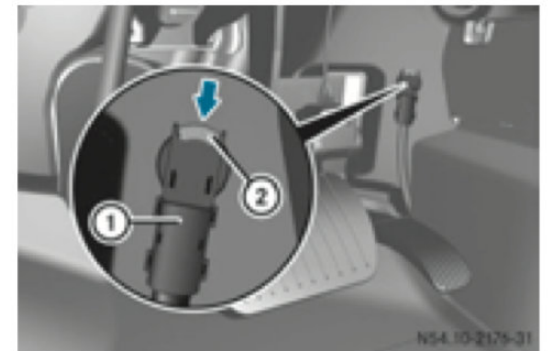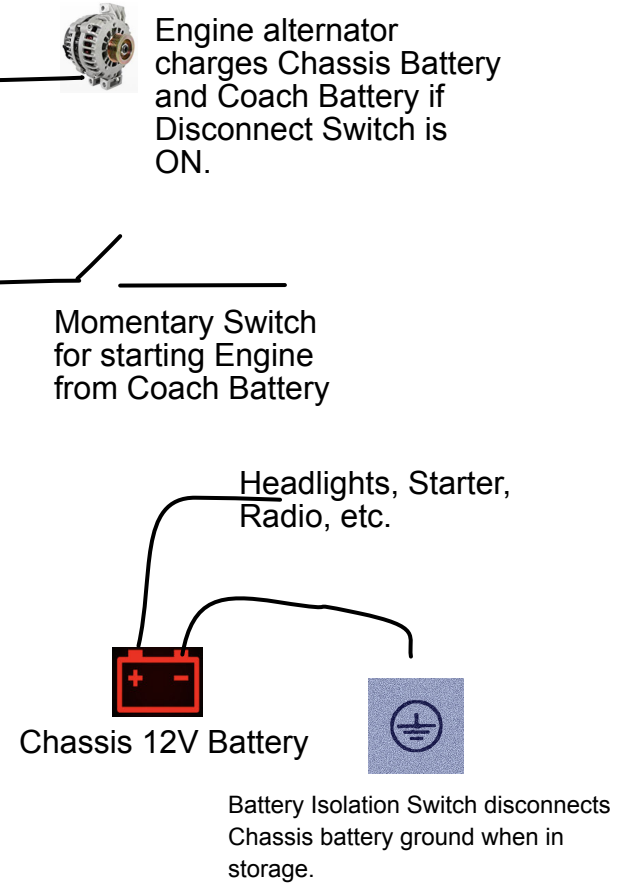

Battery isolating switch in the driver's footwell, on the right-hand side next to the accelerator pedal